


# BA13b - Simple to Use

## Easy Guide to your Bidet Remote Control

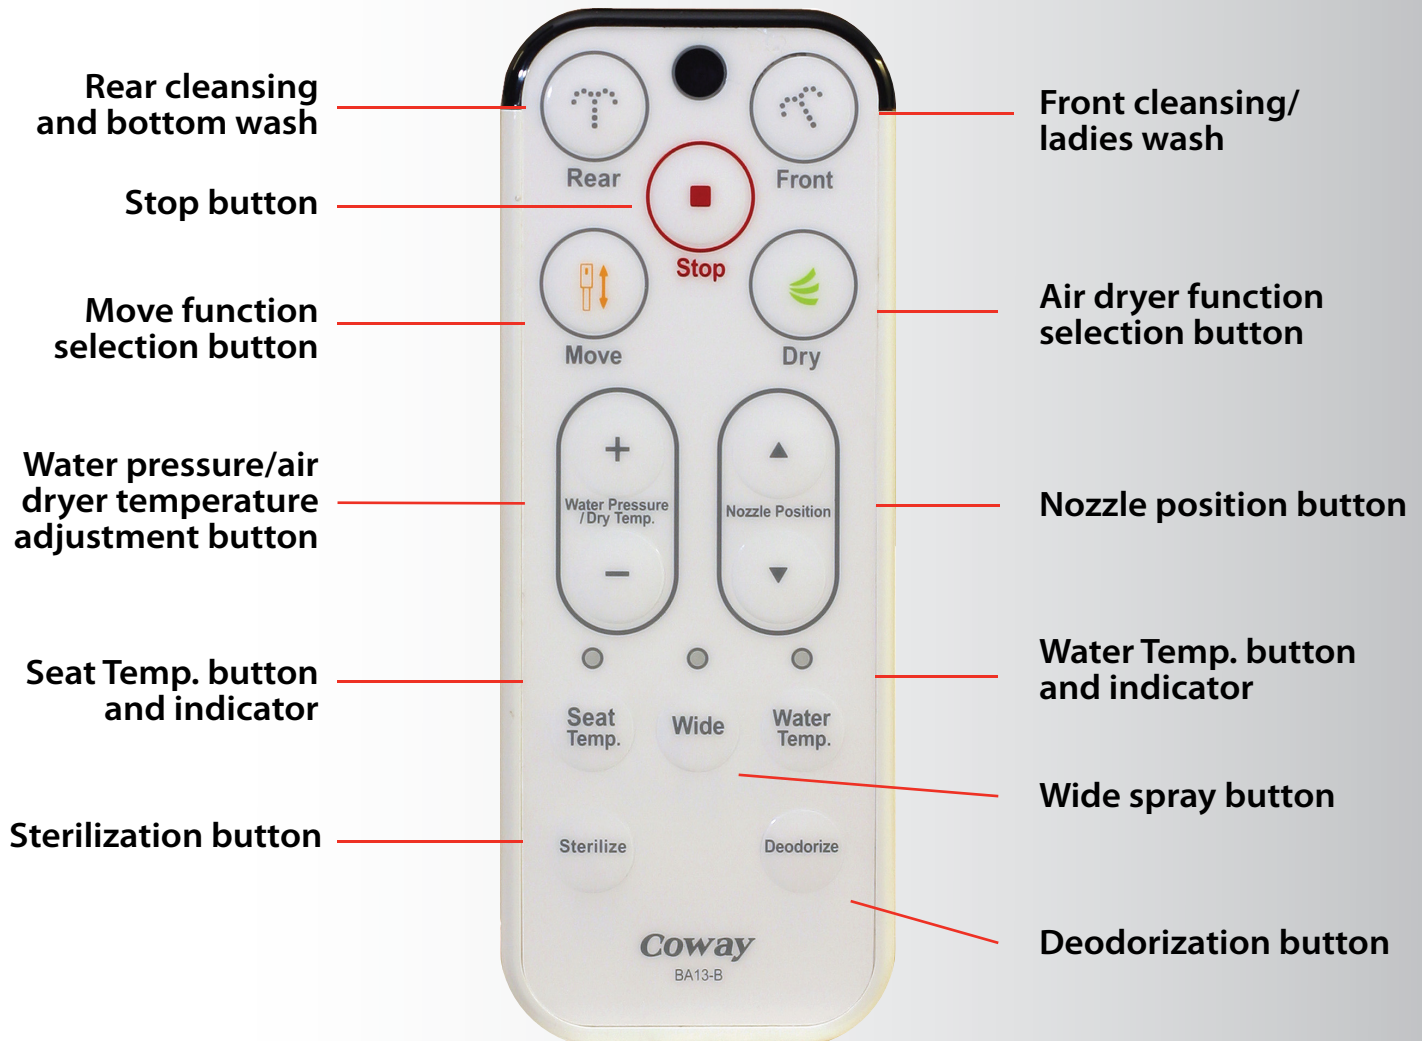

- To start off press the rear or front wash
- Adjust the nozzle position to suit your body or roll your body forward so the spray is directed to the right area
- When you're done, press the "Dry" button to finish off.
- If you're not completely dry, press the button again.

**The**<sup>®</sup>  
**BIDET**  
**SHOP**

FREECALL  
**1800 243 387**

[www.thebidetshop.com.au](http://www.thebidetshop.com.au)



# BA 13b - Remote Control Functions

## Function Buttons Explained - What they can do for you

### Rear cleansing and bottom wash -

Use this button for the rear cleansing function.

**Stop button** - All currently operating functions will stop.

**Move function selection button** - By pressing the 'Move' button while the rear cleansing/front cleansing function is operating, the nozzle will move forwards and backwards so you can clean a wider area.

**Water pressure / air dryer temperature adjustment button** - Controls the water pressure in 3 levels (Low-Medium-High) and controls the air dryer temperature in 4 levels (Low-Medium-High-Off) while the dryer is running.

**Seat Temp. button indicator** - You can control the seat temperature in 4 levels when the 'Water Temp.' button is pressed, the temperature control indicator cycles through the following order: L(Blue) > M(Pink) > H(Red) > Off (No colour).

**Sterilization button** - Use this button to perform the sterilization function. Sterilizing water is ejected for 30 seconds to sterilize and clean the nozzle.

### Front cleansing / ladies wash -

Use this button to use the front cleansing function for women.

**Air dryer function selection button** - Activates the warm air dryer.

**Nozzle position button** - You can move the nozzle forwards or backwards in 5 different positions during the rear cleansing/front cleansing operation.

**Water Temp. button indicator** - You can control the water temperature in 4 levels when the 'Water Temp.' button is pressed, the temperature control indicator cycles through the following order: L(Blue) > M(Pink) > H(Red) > Off (No colour).

**Wide spray button** - Changes the width of the spray pattern from a single line point to a wider fan spray.

**Deodorization button** - Use this button to perform the deodorization function. When you press this button, the deodorization function is performed for approximately 1 minute.

