

EBS-200 + EBS-300 - Simple to Use

Easy Guide to your Bidet Remote Control

STOP

To stop any functions
To power off, press this for 3 seconds.

WASH

To run for posterior wash or sitz bath function.

BIDET

To run for feminine wash or sitz bath function.

FR/BK

Controls the nozzle position as desired. Press this for 3 seconds, nozzle comes out for manual cleaning.

PULSE


To run the PULSE function on the model of WASH/BIDET/POWER WASH. The water pressure is rhythmically changed from strong to weak. Press this for 3 seconds to release the seat sensor.

CHILD

Children safety mode. All settings are adjusted for child and after wash dry works automatically.

ECO MODE

1 step : automatic mode
2 step : powerful saving
3. cancellation

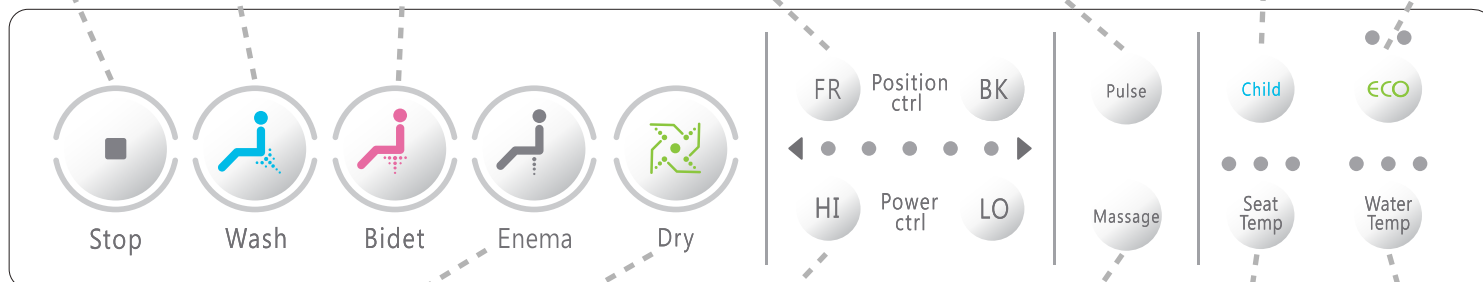

POWERWASH

To run the power wash function.

DRY

To run the dry function. Temperature is adjustable by HI/LO button. (EB-S300 ONLY)

HI/LO

Adjusting water pressure/dry level in 5 steps

MASSAGE

To run the MASSAGE function, nozzle is moving forward and backward repeatedly.

SEAT TEMP

To adjust the seat temp. by 4 steps. OFF-LOW-MID-HI

WATER TEMP

To adjust the water temp. by 4 steps. OFF-LOW-MID-HI

EBR-500 - Simple to Use

Easy Guide to your Bidet Remote Control

STOP

To stop all functions.

BIDET

To run the bidet function (2 minutes)

DRY

To run the dry function (3 minutes)

WATER TEMP


To adjust the water temp. by 4 steps (Room temp/34°C/36°C/38°C)

SEAT TEMP

To adjust the seat temp. by 4 steps (Room temp/34°C/38°C/42°C)

MASSAGE

To run the Massage (oscillating) during Wash/Bidet. (Not in Enema wash mode) Nozzle moves back and forth automatically. Press it again to stop the function.

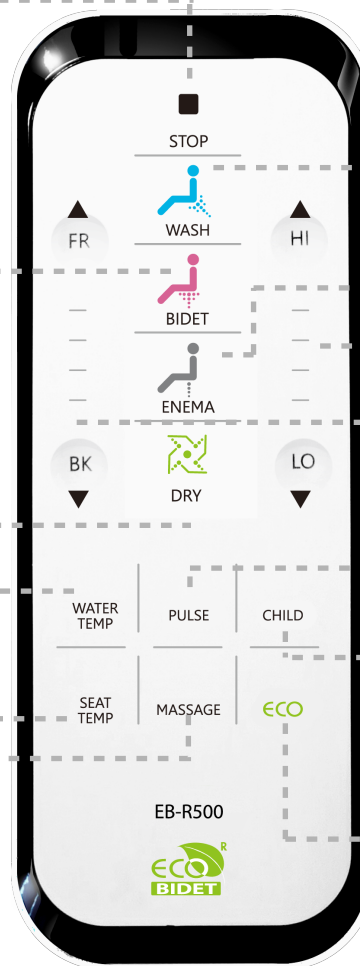

WASH

To run the wash function (2 minutes)

ENEMA WASH

To run the Enema wash (2 minutes)

POWER CONTROL

Water pressure and dry temp can be adjusted by pressing HI/LO.

NOZZLE CONTROL

To control the nozzle position

CHILD

children safety mode.

ECO SAVING MODE

Automatic mode. Learning energy saving mode. Releasing energy saving mode.

PULSE

To run the Pulse function during Wash/Bidet/Enema Wash. Water pressure is rhythmically changed from strong to weak.